

F90 Series (Rate Indicators / Controllers)

INSTRUCTION MANUAL


FEATURES

DIN 48 ´ 96mm	1 / TAU	Prescale
DIN 48 ´ 96mm Standard Panel Size	High precision, from low speed to high speed by 1/TAU. Measuring range is 0.11Hz ~ 20kHz.	Multiplier and divider combinable, correspond to any revolution ratio and circumference ratio.
Monitor & Preset Type	Input	Discontinued Analog Output
1. Monitor type with the large display 2. Preset Type can make the upper/lower limit output.	Correspond to each input mode of Contact, Open Collector, Voltage and Magnetic Sensor	Analog output available as an option
Decimal Point Positioning	Up-Date Time	Key Lock and Output Inhibition
By selecting the decimal point position, it can display the measured data below the decimal point.	Up-date time can be set regardless of sampling time.	By easy wirings, key lock (front key operation lock) and output inhibition are available.


MODELS

MODEL	FUNCTION	NUMBER OF DIGITS	SETTING DIGITS	ADDED FUNCTION
F90-101	Monitor Type	6	—	—
Discontinued F90-103		6	—	ANALOG OUTPUT
F90-201	Preset Type	6	6	—
Discontinued F90-203		6	6	ANALOG OUTPUT

FRONT PANEL & DIP-SWITCH

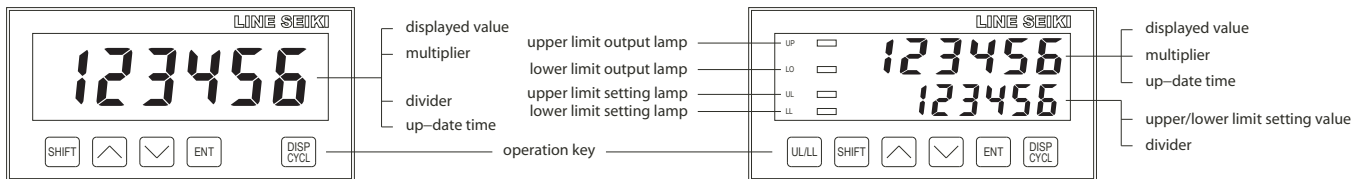

- UL/LL** : Alternate display of upper limit and lower limit value.
- SHIFT** : Enter to editing mode and change digit for editing. Display the prescale value. Used for the decimal point positioning.
- UP** : Increase the numerical value of the setting digit. Used for the decimal point positioning.
- DOWN** : Decrease the numerical value of the setting digit. Used for the decimal point positioning.
- ENT** : Save the setting. Display the prescale value.
- DISP CYCL** : Display the up-date time.

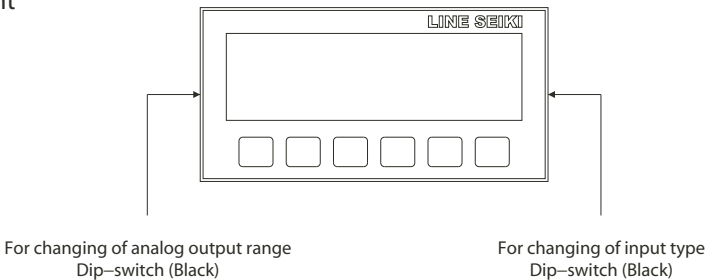

































■ EDITING

< PRESCALE VALUE >

For prescale, both multiplier and divider can be set.
The formula on displayed value and the prescale value is the following

$$\text{Displayed Value} = \frac{\text{Multiplier}}{\text{Divider}} \times \text{Number of Input Pulse}$$

For example, in case of fitting the 200 ppr encoder on the roller whose circumference is 50 cm and making the roller's surface speed display at cm/min, set the multiplier at 50 and divider at 200.

OPERATION	EXPLANATION OF OPERATION	MONITOR TYPE : F90-101 , 103	PRESET TYPE : F90-201 , 203
ENT + SHIFT	Press SHIFT key and with ENT key pressed. Present prescale value will be displayed. The display returns to measuring mode if ENT key is pressed or SHIFT key is not pressed within 3 seconds while present prescale value appears.	 ← multiplier=1	 ← multiplier=1 ← divider=1
SHIFT	Press SHIFT key to enter multiplier editing mode and make the leftmost digit blink.		
	Press  key 5 times or continue to press to set the leftmost digit to be 5.		
SHIFT	Press SHIFT key once to make the next digit flash.		
	Press  key once to set 0 to this flashing digit		
SHIFT	Press SHIFT key 6 times or continue to press to shift the flashing digit for editing.	Press SHIFT key while the rightmost digit of the multiplier is flashing. Then, the display will enter divider editing mode and the leftmost digit will blink.    ← divider=1	  
	Press  key twice to set 2 to this flashing digit.		
SHIFT	Press SHIFT key twice to shift flashing digit for editing.		
	Press  key once to set 0 to this flashing digit.		
ENT	Press ENT key to stop flashing of digit and save the setting. The display returns to measuring mode after 3 seconds automatically or by pressing ENT key again.		

In case of setting the multiplier to be 00.0000, this means the multiplier is 100.

In case of setting the divider to be 0000, this means the divider is 1.

< UP-DATE TIME >

By setting the up-date time, the display can be renewed at reasonable time without renewing the display in every sampling.
For example, if you prefer that display renews every 28 seconds, set 28 for the up-date time.

OPERATION	DESCRIPTION	MONITOR TYPE : F90-101 , 103	PRESET TYPE : F90-201 , 203
	Press key to display present up-date time. The display returns to measuring mode if key is pressed or key is not pressed within 3 seconds while present up-date time appears.		
	Press key to enter editing mode and make the left digit flash.		
	Press key twice to set 2 to this flashing digit.		
	Press key once to shift flashing digit for editing		
	Press key twice to set 8 to this flashing digit		
	Press key to stop flashing of digit and save the setting. The display returns to measuring mode after 3 seconds automatically or by pressing key again.		

In case of setting the up-date time to be 00, this means the up-date time is equal to the sampling time.
In case of except for 00, the display shows newest measured data every up-date time passed.
But it shows newest measured data at once if the status of upper or lower output is changed by comparing calculation of every sampling time.

< DECIMAL POINT POSITIONING >

By using the decimal point positioning function, the display can show up to 4 digits after the decimal point of measured data.
In case of the upper/lower limit type, the decimal point position of preset display shifts automatically corresponding to the decimal point of measuring display.

OPERATION	DESCRIPTION	MONITOR TYPE : F90-101 , 103	PRESET TYPE : F90-201 , 203
 + 	Whenever key is pressed while both and key are pressed, decimal point shifts and be determined.	 ↓ ↓ ↓ ↓ 	 ↓ ↓ ↓ ↓

< UPPER / LOWER LIMIT OUTPUT >

F90–201, 203 can set upper lower limit to compare with measured data and to output.

For example, when you need output when measured data is above 180000 and below 9200, set upper limit for 180000 and lower limit for 9200.

OPERATION	DESCRIPTION	UPPER LIMIT 180000
	Press key to display preset upper limit value and to turn the UL lamp.	
	Press key once to make the leftmost digit flash.	
	Press key once to set this flashing digit for 1.	
	Press key once to shift flashing digit for editing.	
	Press key twice, to set this flashing of digit for 8.	
	Press key to stop flashing of digit and to memory the selected numbers.	

OPERATION	DESCRIPTION	UPPER LIMIT 180000
	Press key to display preset lower limit value and to turn the LL lamp.	
	Press key three times to make the 4th digit.	
	Press key 9 times to set this flashing digit for 9.	
	Press key once to shift flashing digit for editing.	
	Press key twice, to set this flashing digit for 2.	
	Press key to stop flashing of digit and to memory the selected numbers.	


Regardless of up-date time, the measured data is compared with the upper/lower limit value in every sampling time.

The upper/lower limit is compared with the displayed data whose number of digits is determined by decimal point positioning function.

Digits undisplayed are not included in this comparison.

■ MEASURED DATA AND COMPARED OUTPUT

Example : Upper Limit = 180000
Lower Limit = 9200

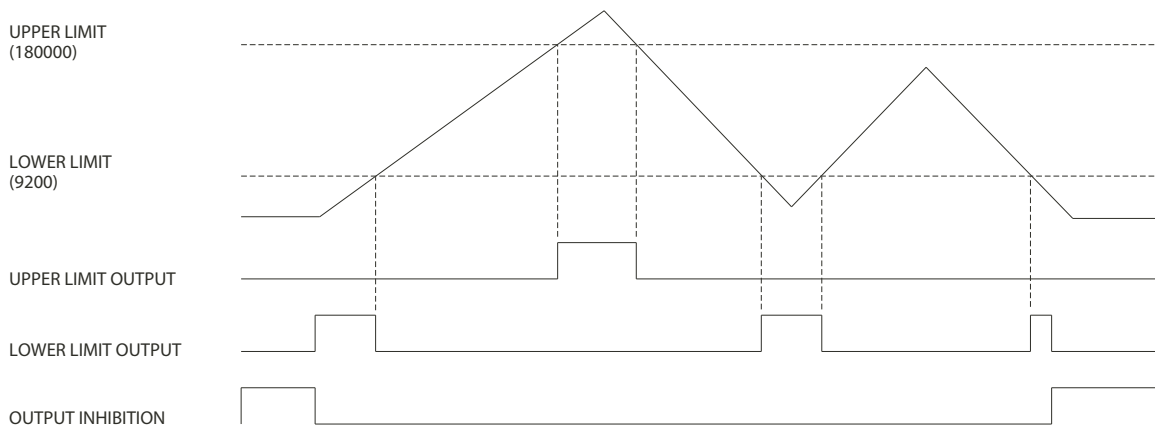

Upper limit \leq measured data ; make upper limit output ON and short N. O. and COM of relay (terminal No.①① and ①②).

Upper limit $>$ measured data ; make upper limit output OFF and short N. C. and COM of relay (terminal No.①③ and ①②).

Lower limit \geq measured data ; make lower limit output ON and short N. O. and COM of relay (terminal No.①④ and ①⑤).

Lower limit $<$ measured data ; make lower limit output OFF and short N. C. and COM of relay (terminal No.①⑥ and ①⑤).

If output inhibition is ON, upper / lower limit output turns OFF at the sampling time.




















■ WIRING AND REAR TERMINALS

Type	Monitor Type	Upper / Lower Limit Preset Type
Model	F90-101, 103	F90-201, 203
Rear Terminals	<p>* F90-103 ONLY</p>	<p>* F90-203 ONLY</p>
Power Source and Earth	<p>Supply 100 ~ 240VAC to terminal No. ⑱ and ⑳ . Earth terminal No. ⑱ in case of need.</p>	
Input	<p>CONTACT</p> <p>OPEN COLLECTOR</p> <p>VOLTAGE PULSE</p> <p>MAGNETIC SENSOR - (NPN)</p> <p>By type of input signal, set dip-switch (Black) on your right side.</p>	
Comparison Output		<p>⑪, ⑫, ⑬ : UPPER LIMIT OUTPUT ⑭, ⑮, ⑯ : LOWER LIMIT OUTPUT</p>
Output Inhibition		<p>CONTACT INPUT</p> <p>OPEN COLLECTOR INPUT</p> <p>Short terminal No. ④ and ⑤ , comparison output mode will be inhibited.</p>
Key Lock	<p>CONTACT INPUT</p> <p>OPEN COLLECTOR INPUT</p> <p>Short terminal No. ⑥ & ④ , the change of upper / lower limit and up-date time will be disabled (except monitor type). Short terminal ⑦ & ④ , the change of prescale will be disabled.</p>	
Reset	<p>CONTACT INPUT</p> <p>OPEN COLLECTOR INPUT</p> <p>Connecting Terminals No. ⑰ & ④ will reset the displayed value.</p>	
Analog Output (F90-103/203)	<ul style="list-style-type: none"> - Terminal No. ⑧ ; current output - Terminal No. ⑨ ; voltage output - Terminal No. ⑩ ; common of analog output (Select current output or voltage output) <ul style="list-style-type: none"> • Analog output range is selected by the key of output by dip-switch (Black) on your left side. • Analog output is adjusted by the volume beside dip-switch. • Analog output is converted directly from frequency of input signal, and declines prescaler function. 	

* Do not wire to unused terminals.

SETTING FOR SAMPLING TIME

The sampling time can be set in the range of the following diagram.

- | | KEY OPERATION | DISPLAY | NOTE |
|----|--|--|--|
| 1. |  +  | 
(Existing setting value)
* This value is set to 0 on ex-factory. | The cross reference between setting value and sampling time is shown in the table below. |
| | When the display is in the measuring mode, press  key and  key at the same time | | |
| 2. |   → 
  →  | | (If the  or  is not pressed within 3 secs, the display returns to the measuring mode automatically.) |
| | Press  or  key to blink existing setting value. By using these keys, select the favorite setting value. | | |
| 3. |   | | The display returns to the measuring mode by pressing  key, or 3 sec later automatically. |
| | Press  key to save the setting. | | |

CROSS REFERENCE BETWEEN SETTING VALUE AND SAMPLING TIME

Setting Value	Sampling Time (seconds)	Minimum Input Frequency (Hz)	Converging Time (seconds)
0	0.5 ~ 10	0.1000	10 ~ 20
9	0.5 ~ 9	0.1112	9 ~ 18
8	0.5 ~ 8	0.1250	8 ~ 16
7	0.5 ~ 7	0.1429	7 ~ 14
6	0.5 ~ 6	0.1667	6 ~ 12
5	0.5 ~ 5	0.2000	5 ~ 10
4	0.5 ~ 4	0.2500	4 ~ 8
3	0.5 ~ 3	0.3334	3 ~ 6
2	0.5 ~ 2	0.5000	2 ~ 4
1	0.5 ~ 1	1.0000	1 ~ 2

Converging time means the time duration to make the display show 0 after input pulse ends. Shortest converging time is equal to the sampling time and longest one is double of sampling time.

DIP-SWITCHES

For Input Switch (Black)

Input	No.	SW1	SW2	SW3
Open Collector Input		OFF	OFF	OFF
Voltage Input		ON	OFF	OFF
Magnetic Sensor Input		ON	ON	OFF
Contact Input		OFF	OFF	ON


For analog output range (Black) F90-103, 203

Range	No.	SW1	SW2	SW3	SW4	Voltage Output	Current Output
20Hz - 200Hz		OFF	OFF	ON	ON	1 - 10V (frequency Hz x 0.05V)	5.6 - 20mA (frequency Hz x 0.08mA + 4mA)
20Hz - 2kHz		OFF	ON	OFF	OFF	0.1 - 10V (frequency Hz x 0.005V)	4.16 - 20mA (frequency Hz x 0.008mA + 4mA)
200Hz - 20kHz		ON	OFF	OFF	OFF	0.1 - 10V (frequency Hz x 0.0005V)	4.16 - 20mA (frequency Hz x 0.0008mA + 4mA)

SPECIFICATIONS

Type	Monitor Type	Upper / Lower Limit Preset Type
MODEL (Additional Function)	F90-101 F90-103 (ANALOG output only)	F90-201 F90-203 (Upper Limit, Lower Limit and ANALOG output)
Display	Red LED 14.22 x 7.8mm	Measuring Display: Red LED 10.0 x 5.5mm Preset Display: Green LED 8.0 x 4.0mm
Number of Digits	6	
Display Range	0.0001 - 999999	
Digits after Decimal Point	Maximum : 4th decimal places	
Scale Range	0.11Hz - 20KHz (1 pulse / revolution : 6.6667rpm - 120000rpm)	
Preset Level	_____	Upper / Lower Limit
Measuring Method	1/TAU standard sampling : X'tal 2MHz ± 50ppm	
Measuring Accuracy	±0.008% reading ±1 digit (multiplier = 1.0000, divider = 1)	
Sampling Time	0.5 - 10 seconds (sampling time is changed automatically by pulse interval.)	
Up-date Time	Every sampling or 1 - 99seconds (maximum)	
Input Signal	Contact input : sink current 2mA Open collector input : sink current 2mA L : 0 - 1.9V Voltage input : input impedance 3KΩ L : 0 - 1.9V H : 3.5 - 30V (P-P3.5Vmin.) Magnetic sensor input : input impedance 3KΩ L : -0.6 - -17V H : 0.6 - 17V	
Input Frequency	Contact input : 0.11Hz - 25Hz minimum pulse width 20msec Open collector or Voltage input : 0.11Hz - 20KHz minimum pulse width 25μsec Magnetic sensor input : 0.11Hz - 20KHz minimum pulse width 25μsec (L : -0.6Vmax., H : 0.6Vmin)	
Prescale	Multiplier : 0.0001 - 100 Divider : 1/1 - 1/9999 (available to use at the same time)	
Overflow	At every sampling, when the measured data is over 6 digits "-----" is displayed	
Memory	Prescale value, upper/lower limit value and up-date time are reserved for 10years by E ² PROM (rewrite 10000 times)	
Keylock	Prescale value, upper/lower limit value (exclude monitor type) and up date time are inhibited to be changed. Contact input • Open collector input (sink current 7mA L : 2Vmax)	
Output Inhibition	_____	Upper / Lower Limit output inhibition Contact input • Open Collector input (sink current 7mA L : 2Vmax)
Reset	Reset displayed value : Contact input / Open collector input (sink current 7mA L : 2Vmax)	
Upper / Lower Output	_____	Each 1C relay contact (250VAC 0.5A/30VDC 2A ; load)
Analog Output (For type 103, 203)	Frequency voltage converter method Voltage Output : 0.1 - 10V (1KΩ min.) ±0.5%FS Current Output : 4.16 - 20mA (500Ω max.) ±0.5%FS Output Ripple : 20mVp-p max. 3 types of range, 20Hz - 200Hz, or 200Hz - 2KHz, 200Hz - 20KHz can be selected by dip-switches (Select voltage output or current output).	
Sensor Supply Power Source	12VDC ±10% 100mA max. (Analog output is 50mA maximum)	
Power Supply	100 - 240VAC -15% +10% (85 - 264VAC) 50/60Hz	
Power Consumption	Approximately 6VA	
Operating Temperature	-5 - 50°C (Non freezing)	
Operating Humidity	45 - 85% RH (Non condensing)	
Front Panel	IP54 standard	
Weight	Approximately 280g	

DIMENSIONS – MILLIMETERS

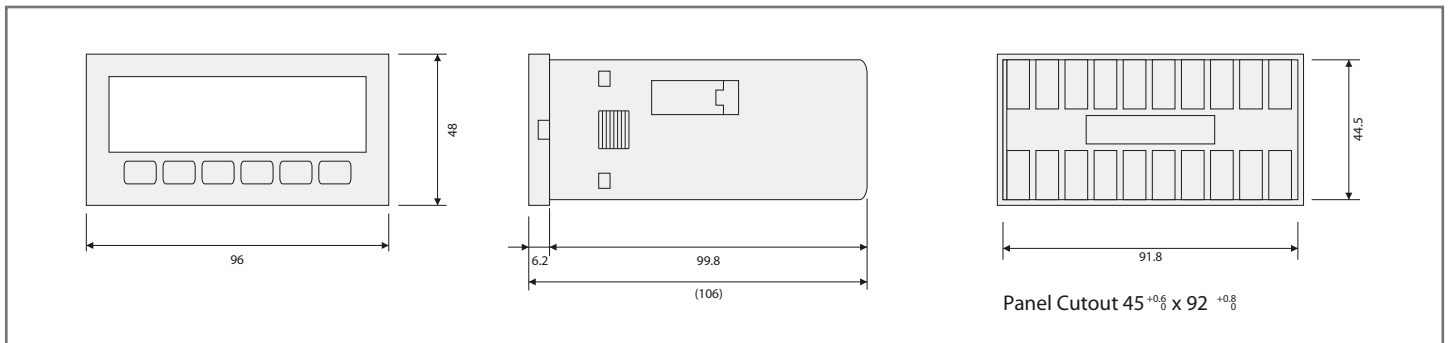

LINE SEIKI CO., LTD

2-37-7, Chuo-cho, Meguro-ku,
Tokyo 152-0001 JAPAN

Please visit our company website for contact details

E-MAIL: webtrade@line.co.jp

URL: <https://www.line-seiki.com>

This manual was last revised February 6, 2025. 4F90001C
*Specifications and printed contents are subject to change without prior notice.
All Rights Reserved, Copyright © 2025, LINE SEIKI CO., LTD.