

G48 SERIES

Electronic Preset Counter Instruction Manual

G48

Thank you for purchasing our G48 Preset Counter. Please read this instruction manual carefully before using to ensure the correct usage of this device. Please keep this instruction manual for future reference.



ATTENTION

Please note that misuse of this device may lead to injury to the user or damage to the device. Please observe all safety precautions and warnings in this instruction manual.

⚠ ATTENTION

**POUR UTILISATION EN ATMOSPHERE CONTROLEE.
FOR USE IN A CONTROLLED ENVIRONMENT.**

● Customer Service



LINE SEIKI CO., LTD.

Head Office 37-7 Chuo-cho, 2-Chome, Meguro-ku, Tokyo 152-001 Japan
TEL: +81-3-3716-5151 FAX: +81-3-3710-4552

Osaka TEL: +81-6-6538-0365 FAX: +81-6-6538-0315

Email webtrade@line.co.jp

Web Site http://www.line.co.jp

⚠ ATTENTION

- ❑ Do not use this device near machines that emit strong electromagnetic fields or objects that store static electricity.
- ❑ Do not drop or subject this device to strong impact.
- ❑ Do not use or store this device where it will be exposed to water or in places with wet conditions.
- ❑ Do not use or store this device where it can be exposed to direct sunlight, dust, high temperature and high humidity.
- ❑ Do not attempt to disassemble or modify this device.
- ❑ Mount to the front panel when using this device. (Indoor use)
- ❑ Do not use organic solvents such as thinners etc. to clean the front panel.
- ❑ Internal circuit may be destroyed if a voltage outside the rated voltage is applied.

⚠ Conformance to EN/IEC standards

- ❑ Basic insulation is provided between Power supply - Input circuit - Output circuit.
- ❑ (Non-insulation is provided between Power supply - Input circuit for model G48-306)
- ❑ When reinforced insulation (Double insulation) is required, apply basic insulation to the external-circuit-side.)
- ❑ Use external fuse (200mA) to the power supply input. (IEC60127)

■ MODELS

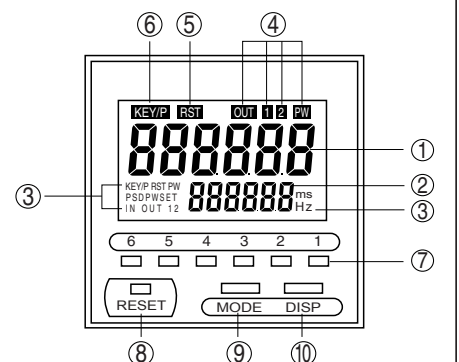
Model	Digit	Preset	Power source	Input	Body length
G48-305	6	1 level preset	AC100 - 240V	Contact / Open collector Voltage input (SELECTABLE)	100 mm
G48-306			DC12 - 24V		64 mm
G48-315		2 level preset	AC100 - 240V		100 mm
G48-325		1 level preset + prewarn			

■ FRONT PANEL FEATURES

- ① Count display
- ② Preset/Programming Setting display
- ③ Program item display

IN Hz : count speed	W : freewrite
IN : input mode / count mode	RST ms : reset time
OUT : output mode	KEY/P : key lock protection
OUT ms : output time	SET : preset value setting
PS : prescale	PW : prewarn value setting
DP : decimal point position	


- ④ Output indicator
- ⑤ External reset input indicator
- ⑥ External key lock indicator
- ⑦ Individual digit setting keys (Key 1 Key 6)
- ⑧ Reset key
- ⑨ Mode key
- ⑩ Display key



■ BASIC OPERATION


The G48 has 2 operation modes. Settings such as selection of input modes and count modes are done in the Program Mode.

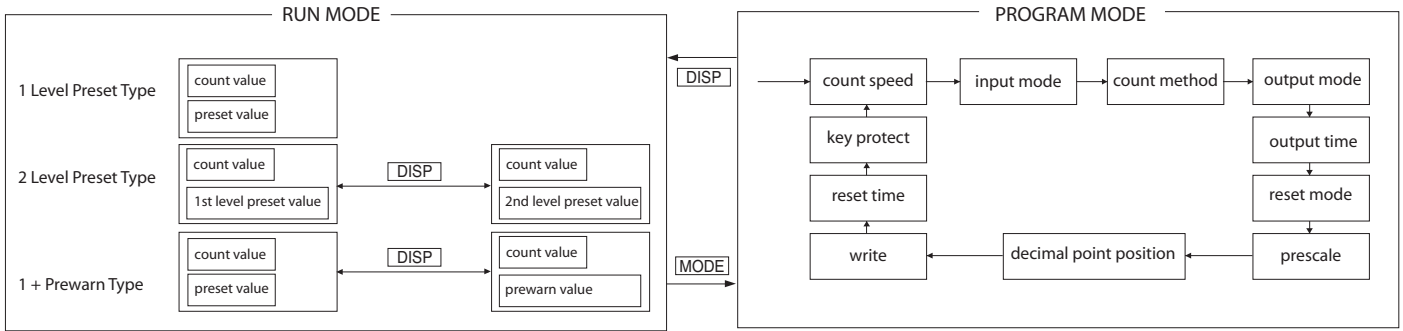Counting and Preset Values setting are done in the Run Mode. Use the **[MODE]** key to enter the Program Mode and the **[DISP]** key to return to the Run Mode.



■ PROGRAMMING

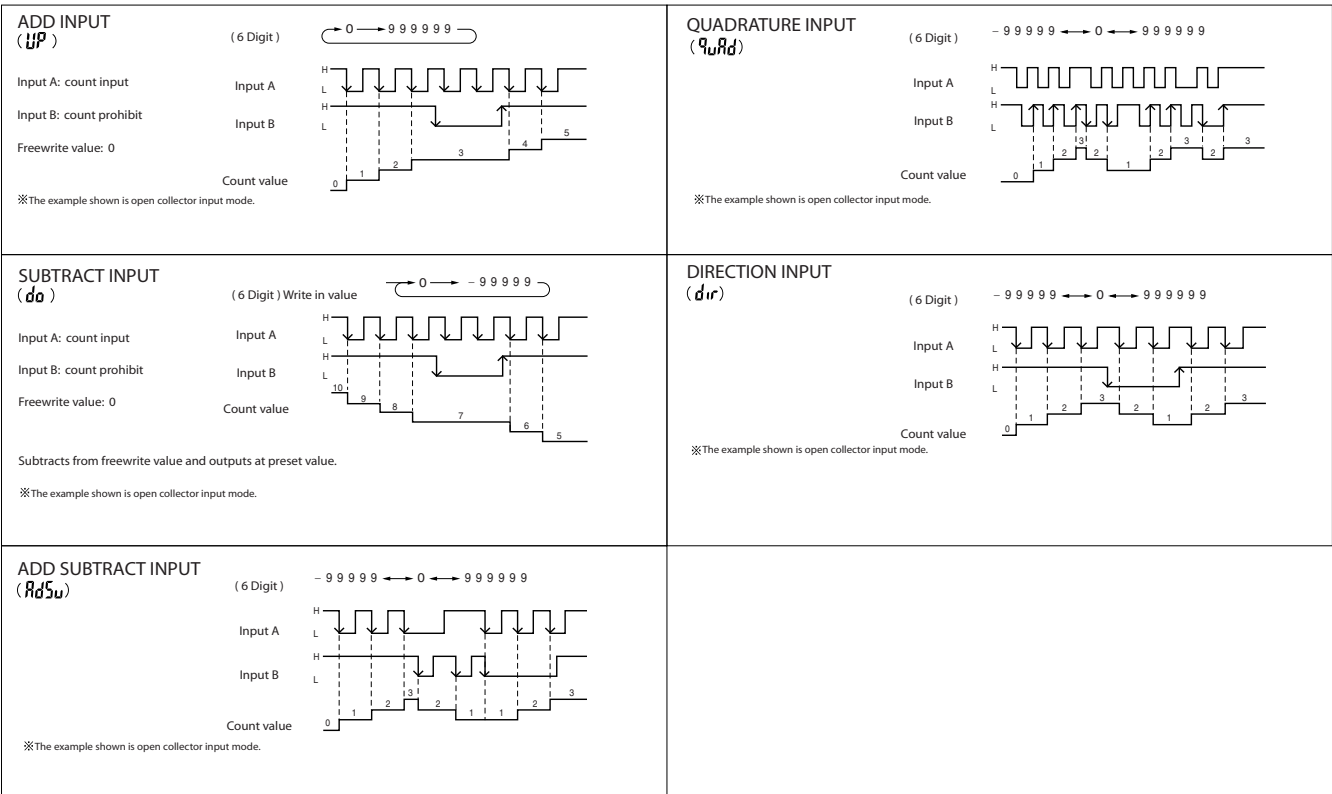- **Count Speed** 30Hz, 1000Hz, or 5000Hz can be selected. Default setting is 30Hz.
- **Input Mode** Contact / Open collector or Voltage input modes can be selected. Default setting is Contact/Open Collector.
- **Count Mode** One of the following 5 count modes can be selected. Default setting is **UP** :



- **OUTPUT MODE** One of the following 6 output modes can be selected. Default setting is **Std**.

Standard Output	Std	Output occurs when count value reaches preset value. Different output conditions can be set. (One-Shot (10~9990ms), Hold, Hold1, Hold2)
Equal Output	EQAL	Output occurs only when and continues as long as count value is equal to preset value.
Lower Limit Output	LL	Output occurs when count value reaches below the set value.
Upper Limit Output	UL	Output occurs when count value reaches above the set value.
Upper - Lower Limit Output	LL-UL	Output occurs when count value reaches below (Lower) or above (Upper) the set value.
Upper 1 - Upper 2 Limit Output	UL-HUL	Output occurs when count value reaches above the set value.

● Output Time

For Standard Output Mode, all the Output Time are available.

For other Output Modes other than Standard Output Mode, only HOLD output time is available.

Hold	Hold	Output is Latched until a Reset signal is sent.	1 Level Preset, OUT2 of 2 Level Preset, OUT2 of Prewarn + 1 Level Preset
Hold 1	Hold-1	Output is Latched until Output 2 goes away.	OUT1 of 2 Level Preset, PW or Prewarn + 1 Level Preset
Hold 2	Hold-2	Output is Latched until a Reset signal is sent, independent from Output 2.	
One Shot	10~9990_{ms}	Output time can be set from 10 ~ 9990ms (at 10ms steps).	All Models

● Reset Mode

There are 7 Reset Modes available.

The output below refers to the 1 Level Preset model, OUT2 of 2 Level Preset Model and to the OUT2 in the Prewarn + 1 Level Preset Model. Default setting is Mode A.

Mode A	A	Unit counts during output signal duration.	Overrun (Without Auto-Reset)
Mode B	b	Unit does not count during output signal duration.	
Mode C	C	Unit does not count during and after output signal duration.	
Mode D	d	Unit resets at rising edge of output signal.	Auto-Reset
Mode E	E	Unit resets at falling edge of output signal. (For One-Shot Output time only)	
Mode F	F	Unit resets at falling edge of output signal, unit display frozen during output signal duration. (For One-Shot Output time only)	
Mode G	G	Unit resets at falling edge of output signal, unit display frozen during output signal duration. (For One-Shot Output time only)	

● Prescale

Incoming pulses can be prescaled to display the desired measuring unit. The prescale can be set at any value within the range of 0.001 ~ 99.999. Default setting is 1.000.

Prescale Formula:
$$PS = \frac{\text{Desired Display Value (per unit)}}{\text{Pulse Number (per unit)}}$$

<Examples>
 1. To display 1 count per 10 pulses : PS value = 0.1
 2. To display 1 count per 5 pulses : PS value = 0.2
 3. To display 2 counts per 1 pulse : PS value = 2

● Decimal Point Position

Decimal point position can be selected from the following settings: 0, 0.0, 0.00, 0.000. Default setting is 0.

● Free Write

Any desired value can be set on the unit as the starting count value of the counter. The counter will add to or subtract from the set value. Upon every reset, the set value will be displayed. Default setting is 0.

● Reset Time

Reset time sets minimum pulse time of remote reset signal. Reset time can be set to 2ms or 20ms. Default setting is 20ms.

● Key Protect

There are 4 protection levels. Default setting is Level 1.

Level 1	L1	Lock program	Protection level can be selected in the Program Mode.
Level 2	L2	Lock program & front key reset	
Level 3	L3	Lock program & preset	
Level 4	L4	Lock program, front key reset & preset	

PROGRAM MODE OPERATION

Press **MODE** to select program menu items. Press individual digit setting keys to change setting values.

Program Item	Program Item Display	Setting Values	Setting Key	Default Value
	IN Hz	30 → 1000 → 5000	Key 1 will select the desired value	30 (Hz)
	IN	n → P n is contact/open collector input mode. P is voltage input mode.	Key 1 will select the desired value	n (contact / open collector)
	IN	UP → do → AdSu → QuAd → d, r	Key 1 will select the desired value	UP (Add)
	OUT (1 level preset)	Std → EQuRL → LL → UL	Key 1 will select the desired value	Std
	(2 level preset)	Std → EQuRL → LL → UL → UL → HUL		
	(1 level preset + prewarn)	Std → EQuRL		
	OUT ms (1 level preset output)	0 → 1 → 2 → ... → 8 → 9	Keys 2 ~ 4 will change digits	Hold
		1230 → Hold	Key 1 will select the desired value	
		The output time will automatically become Std if the output mode is different than Hold		
	OUT1 ms (1st preset of 2 level preset model) (prewarn output)	0 → 1 → 2 → ... → 8 → 9	Keys 2 ~ 4 will change digits	Hold-1
		1230 → Hold-1 → Hold-2	Key 1 will select the desired value	
		The output time will automatically become Std if the output mode is different than Hold		
	OUT2 ms (2nd preset of 2 level preset model) (main output of 1P+1PW model)	0 → 1 → 2 → ... → 8 → 9	Keys 2 ~ 4 will change digits	Hold
	1230 → Hold	Key 1 will select the desired value		
	The output time will automatically become Std if the output mode is different than Hold			
Reset Mode	tP	A → b → C → d → (E) → (F) → (G)	Key 1 will select the desired value	tP_A (Mode A)
		Only mode A can be set if the output mode is different than Std Mode E, F, G, can only be set if OUT or OUT 2 is programmed to one shot output.		
Prescale	PS	0 → 1 → 2 → ... → 8 → 9 Prescaler setting range : 0.001 ~ 99.999	Keys 1 ~ 5 will change the corresponding digit	1.000
Decimal Point Position	DP	0 → 0.0 → 0.00 → 0.000	Key 1 will select decimal point position	0
Write	W	0 → 1 → 2 → ... → 8 → 9	Press corresponding numeric keys	0
Reset	RST ms	2 → 20	Key 1 will select the desired value	20 (ms)
Key Lock	KEY/P	L1 → L2 → L3 → L4	Key 1 will select the desired protection level	L1 (Level 1)







■ WIRING AND REAR TERMINALS

MODELS	G48-305	G48-315	G48-325	G48-306
PRESET LEVELS	1 level	2 levels	1 level + prewarn	1 level
REAR TERMINALS				
POWER SOURCE	Supply 100~240VAC to terminals 9 & 10.			Supply 12~24VDC to terminals 9 & 10.
INPUT	<p>Add/Sub Direction Input (1 input) Depending on the status of input B (ON/OFF), pulses at input A will be added to or subtracted from pulse register. Counter will add pulses while terminals 2 and 4 are disconnected, and subtract pulses while shorted.</p> <p>Contact Input </p> <p>Open collector Input </p> <p>Voltage Input </p> <p>Add or Subtract Input (1 input)</p> <p>Contact Input </p> <p>Open collector Input </p> <p>Voltage Input </p> <p>Individual Add and Subtract Input (2 inputs)</p> <p>Contact Input </p> <p>Open collector Input </p> <p>Voltage Input </p> <p>90° Quadrature Input (2 inputs)</p> <p>Double Pulse Sensor </p> <p>⚠ Caution Be careful not to apply voltage exceeding DC30V. Internal circuit may be destroyed and may have the risk of electric shock if a voltage exceeding DC75V is applied in single-fault-conditions.</p> <p>※ For DC Powered model, use terminal 9 instead of terminal 3</p>			
OUTPUT				
RESET	To reset remotely, short terminals 4 and 5 with a relay, microswitch, etc. (The unit does not count while shorted)			
KEY PROTECT	To disable keys at any of the 4 protection levels short terminals 4 and 12. (See Program Mode).			
COUNT DISABLED	For Contact/Open Collector input mode 2 and 4. ※ For Voltage input mode, 2 and 3.			For Contact/ Open Collector, 2 and 4. ※ For Voltage input mode, 2 and 9.

OPERATION MODE AND OUTPUT MODE

One of the following Operation mode t_P and output mode OUT can be selected.

Type	Operation Mode	Output Mode	Operation Example
	<p>Mode A $t_{P.A}$</p> <p>[counts during output in overrun]</p>	<p>Standard Output</p> <p>Std</p>	<p>[In case of 1 level preset models operation is the same as OUT 2 operation.]</p>
		<p>Equal Output</p> <p>$EqAL$</p>	<p>[In case of 1 level preset models operation is the same as OUT 2 operation.]</p>
		<p>Upper and lower limit outputs</p> <p>$LL-UL$ (LL)</p>	<p>[In case of 1 level preset models operation is the same as OUT 1 operation.]</p>
		<p>Upper limit outputs 1 & 2</p> <p>$UL-HUL$ (UL)</p>	<p>[In case of 1 level preset models operation is the same as OUT 1 operation.]</p>
		<p>2 level (or 1 level) preset</p> <p>Mode B $t_{P.B}$</p> <p>[does not count during output in overrun]</p>	<p>Standard Output</p> <p>Std</p>
<p>Mode C $t_{P.C}$</p> <p>[does not count during and after output in overrun]</p>	<p>Standard Output</p> <p>Std</p>	<p>[In case of 1 level preset models operation is the same as OUT 2 operation.]</p>	
<p>Mode D $t_{P.D}$</p> <p>[auto-reset at rising edge of output]</p>	<p>Standard Output</p> <p>Std</p>	<p>[In case of 1 level preset models operation is the same as OUT 2 operation.]</p>	
<p>Mode E $t_{P.E}$</p> <p>[auto-reset at falling edge of output]</p>	<p>Standard Output</p> <p>Std</p>	<p>[In case of 1 level preset models operation is the same as OUT 2 operation.]</p>	

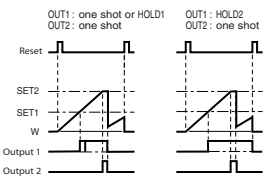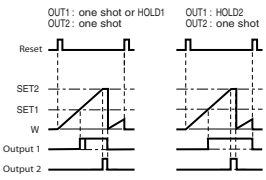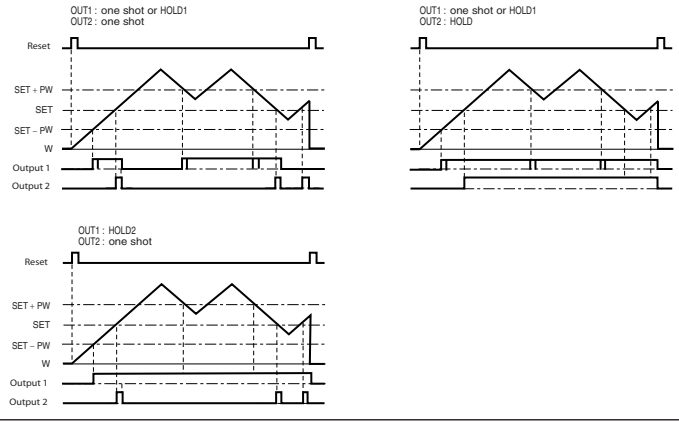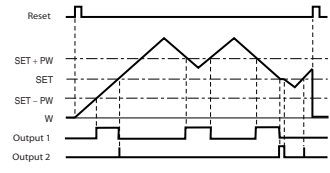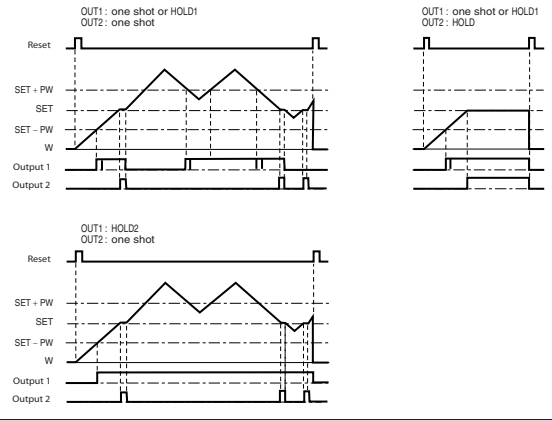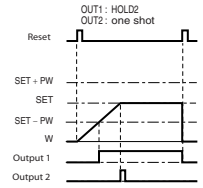Type	Operation Mode	Output Mode	Operation Example
2 level (or 1 level) preset	<p>Mode F EP.F</p> <p>[auto-reset at falling edge of output, display "frozen" during output]</p>	<p>Standard Output</p> <p>Std</p>	
	<p>Mode G EP.G</p> <p>[auto-reset at falling edge of output, display "frozen" during output]</p>	<p>Standard Output</p> <p>Std</p>	
1 level preset + prewarn	<p>Mode A EP.A</p> <p>[counts during output in overrun]</p>	<p>Standard Output</p> <p>Std</p>	
		<p>Equal Output</p> <p>EQUAL</p>	
	<p>Mode B EP.b</p> <p>[does not count during output in overrun]</p>	<p>Standard Output</p> <p>Std</p>	
<p>Mode C EP.C</p> <p>[does not count during and after output in overrun]</p>	<p>Standard Output</p> <p>Std</p>		

Modes D,E,F,& G in 1 level preset + prewarn models are similar to those in 2 preset level ones: the main output in these models corresponds to SET 2 and the prewarn corresponds to SET 1. Latched (HOLD) output returns to the initial status of power interruption when the power is recovered after power interruption.

SPECIFICATIONS

MODEL	G48-305	G48-315	G48-325	G48-306
DISPLAY	LCD display with backlight ; Digit Size : 10mm x 5mm			
NO. OF DIGITS	6			
NO. OF DIGIT SETTING KEYS	6			
PRESET LEVEL	1 Level	2 Levels	1 level preset + prewarn	1 Level
SETTING RANGE	-99999 – 999999			
PREWARN FEATURE	—		0 – 999999	—
INPUT MODE	Contact / Open Collector / Voltage (selectable)			
INPUT SIGNAL	Open Collector (Sink current 10mA, DC power model: power supply volt / 1.2K Ω) L : 0 - 4V Voltage (Input impedance 7K Ω) L : 0 - 4V H: 6 - 30V (Available to duplex wire DC sensor.)			
COUNT SPEED	30Hz, 1kHz, 5kHz (selectable)			
COUNT MODE	Add, Subtract, Add/Subtract (Add/Subtract individual input, Add/Subtract direction, 90° quadrature input)			
COUNT RANGE	-99999 – 999999			
INPUT INHIBITION	Incoming pulses in either add or subtract mode can be inhibited at input B only.			
PRESCALE	0.001 – 99.999 (0 setting is not available)			
DECIMAL POINT POSITION	0.0, 0.00, 0.000, (No decimal point)			
WRITE	-99999 ~ 999999			
RESET	Front panel reset, Remote reset, Auto-reset			
REMOTE RESET TIME	2msec or 20msec (selectable)			
RESET MODE	Modes A, B, C, D, E, F, G can be selected. Except for standard output, Mode A only is available for other output modes.			
MEMORY	E ² PROM (10 years, can be used 100,000 times)			
OUTPUT	Relay output (1a) : load of 250VAC 5A / 30VDC 5A maximum			
OUTPUT DELAY	30Hz : 20msec, 1kHz & 5kHz : 7msec.			
TYPE OF OUTPUT	1 Level Preset: Standard, Equal, Lower Limit, Upper Limit / 2 Level Preset: Standard, Equal, Upper-Lower Limit, Upper-Upper Limit / 1 Level Preset + Prewarn: Standard, Equal			
OUTPUT TIME	Standard output : one shot (10 ~ 9990msec) or HOLD or HOLD 1 or HOLD 2 Equal, Upper, Lower output : Latched only when requirements are full			
KEY LOCK	Key operation can be disabled at 4 protection levels (L1, L2, L3, L4) by selecting in Program Mode and shorting key lock terminals.			
ERROR DISPLAY	In Add/subtract mode, error message will be displayed on the LCD if the count range is exceeded (overflow error : $\mathbf{O}\text{-}\mathbf{E}\mathbf{r}$ underflow error : $\mathbf{U}\text{-}\mathbf{E}\mathbf{r}$)			
POWER SUPPLY	AC100 – 240V -15%, +10%		DC12-24V -15%, +10%	
SENSOR POWER SOURCE	DC12V 100mA		—	
POWER CONSUMPTION	Approx. 7VA for 240VAC		Approx. 1.2W for 24VDC	
AMBIENT TEMP./HUMID. : OPERATING	-10°C ~ +50°C (non-freezing, non-condensing) 45 – 85%RH (non-freezing, non-condensing)			
ALTITUDE	2,000m max.			
INSTALLATION ENVIRONMENT	Over-voltage category II, Pollution degree 2 (IEC61010-1)			
FRONT PANEL	IP54 (panel surface)			
COMPLIANCE	CE, UL(UL508), cUL(CSA C22.2 No.14), RoHS			
WEIGHT	Approx. 170g		Approx. 110g	

DIMENSIONS

