

MIERUZZO SERIES MANUAL

INSTRUCTION MANUAL

Sensor Input Device + Wireless

M16-602

Thank you for purchasing our product, M16-602. Please confirm that you have the correct device by checking the product label. Please read this instruction manual carefully before using this device to ensure correct usage. Please keep this instruction manual for future reference.

ATTENTION!

- Do not use this device near machines that emit strong electromagnetic fields or objects that store static electricity.
- Do not drop or subject this device to strong impact.
- Do not use or store this device where it will be exposed to water or any wet conditions.
- Do not attempt to disassemble or modify this device.
- Do not operate with a power source other than the one recommended in this manual or listed on the product labels.

ATTENTION! Please note that misuse of this device may lead to injury to the user or damage to the device. Please observe all safety precautions and warnings in this instruction manual.

Customer Service

LINE SEIKI CO., LTD.

Head Office 37-7 Chuo-cho, 2-Chome Meguro-ku, Tokyo JAPAN 152-0001
 TEL : 03-3716-5151 FAX : 03-3710-4552
 Contact E-mail URL: webtrade@line.co.jp http://www.lineseiki.com

ATTENTION!

- Do not install another wireless device or locate another radio device or antenna within 20cm of this transmitter.
- Co-location of antenna of this transmitter with any other antenna or transmitter is not allowed. Keep the antenna of this device at least 20cm (8 in.) away from another radio device or its antenna.
- Keep separation distance of at least 20cm (8 in.) between the antenna of this device and nearby person during device operation.
- This device is not intended for portable application.

PRODUCT INTRODUCTION

The M16-602 Sensor Input Device+Wireless(802.15.4), or End-device, provides interface between external sensors/inputs and Line Seiki counters with USB function (sold separately). This device reads each input and sends a command to the connected device using USB communication. The command contains the status of all inputs.

Up to 5 sensors or contact inputs can be connected to the input terminals of the Sensor Input Device. This device can provide a DC12V power supply to the connected sensors.

It also provides wireless connectivity to the connected device. It can transmit data from the DK-5000 device to a host computer up to 30 meters away (without obstruction), when used together with a M16-303 Wireless Coordinator.

The M16-602 device communicates with the counter device using the USB 2.0 protocol. It can power the connected device at DC5V, 100mA maximum.

Important!

This device requires Wireless Mieruzzo Basic Software for communication. The software runs on Windows 7, 8, 8.1 or 10. Please use a micro-B-to-A USB cable and an On-the-Go (OTG) micro-B-to-A receptacle cable to connect the M16-602 device to a DK-5000 Series device. (See DEVICE OPERATION for reference in connection.) This product is compatible with DK-5000 Series firmware version 11.0 or above. To check the version number of DK-5000 device:

- Press 2 key while holding down the F key (F + 2) to go to ID settings.
- Press "# + F + 3" key, in this order, to view the firmware version.

POWER SUPPLY

This device is designed to work with AC/DC Power Adapter for DK-5000.

Upon initial connection to the power supply, the device will perform the start-up routine, with the data LED () and wireless LED () blinking *amber* for 5 - 7 seconds. After the start-up routine, the device will proceed to the initialization of the connected USB device then on **Active Mode**, after successful device enumeration. (See OPERATION MODES for details.)

OPERATION MODES

This device has three operation modes: Standby Mode, Active Mode and Wireless Mode.

Standby Mode

This is the default operation mode. After the start-up routine, the device automatically enters **Standby Mode** and wait for a valid USB device to be connected. The data indicator () is OFF when the device is in **Standby Mode**.

Important!

Input signals are ignored by the Sensor Input Device and wireless functions are disabled while in Standby mode.

Active Mode

The device enters **Active Mode** when it detects that a supported USB device (DK-5000) is connected. (See the DEVICE OPERATION section for connection details.)

Input signals fed to the input terminals are recognized only during **Active Mode**. The Sensor Input Device sends a command to the connected USB device and the USB device interprets the received command as either a count increment or status input. If the communication between the DK-5000 device and M16-602 is successful, the data indicator will turn *green*. If an unsupported device is connected, the data indicator will change to *red* (blinking).

This mode also enables the M16-602 wireless function. The communication software can only search for devices that are in **Active Mode**.

M16-602 device does not have its own memory for logging. Logging is expected to be performed by the DK-5000 tally counter. Input count values or status can be viewed thru the connected DK-5000 device.

Important!

Input signals will only be processed by M16-602 when a supported USB device (DK-5000) is connected.

This device will provide external input capability to Input 1~5 of the DK-5000 Series. External inputs for Input 6~30 of 10-key or 30-key DK-5000 device are not supported. Input keys 1~5 of the DK-5000 device are disabled while connected to M16-602. Setting Mode and Memory Recall Mode are still accessible while the devices are connected.


Wireless Mode

In **Wireless Mode**, the device is visible to the communication software. A Coordinator device which has the same network configuration as the End-device must be connected to the PC running the software.

After a successful communication to the software is established, the wireless indicator will turn *green*. A *red* wireless indicator is shown if the device failed to connect to the wireless network.

When connected, the software will be able to request for the data and other information of the connected DK-5000 unit using the M16-602 device. Configuring the DK-5000 device is also possible thru this mode. Refer to the user manual of the Wireless Mieruzzo Basic Software for complete instructions on how to use the software.

DEVICE OPERATION

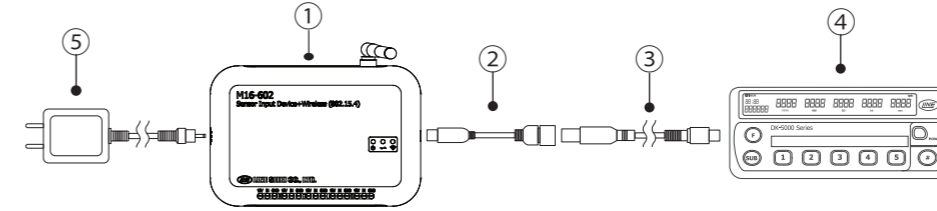

- M16-602 Sensor Input Device+Wireless
- OTG Host cable: micro-B to USB A receptacle
- Micro-B-to-A USB cable
- Line Seiki Counter with USB (i.e. DK-5000, sold separately)
- AC/DC Power Adapter for DK-5000

The Sensor Input Device+Wireless End-device can only operate when a USB device (DK-5000) is connected. Wireless functions are disabled until a DK-5000 device is attached.

The Wireless Mieruzzo Basic Software is required to enable data exchange with M16-602.

Refer to the corresponding Wireless Mieruzzo Basic Software manual for specific instructions in using the wireless device with the communication software.

This wireless system will provide wireless communication and will replace the wired physical connection between a DK-5000 device and a PC.

The Mieruzzo Wireless data transfer system is composed of a Wireless End-device (M16-602), a DK-5000 USB device, a host PC and a M16-303 Wireless Coordinator which creates the network to provide communication link between the device and the host PC. The wireless connection should be established thru the Wireless Mieruzzo Basic Software. Once the device is paired to the PC, the software can start sending commands to the Coordinator which then transmits the command wirelessly to the End-device.


The Wireless Mieruzzo Basic Software enables user to remotely download, save and delete the data saved on the memory of the connected DK-5000 device. The software also enables real-time data display of the displayed data on the attached device.

The wireless system operates at 2.4 GHz, employing IEEE 802.15.4 protocol. Up to 14 End-device (M16-602 or M16-302) can be connected to a Coordinator device (M16-303) in a network, but only one End-device will be paired with the communication software at a time.

DEVICE CONFIGURATION

Connection to PC

Connect the M16-602 End-device to an available USB port in the computer using a micro-B-to-A USB cable. Refer to the illustration below for instruction on connecting M16-602 to a computer.

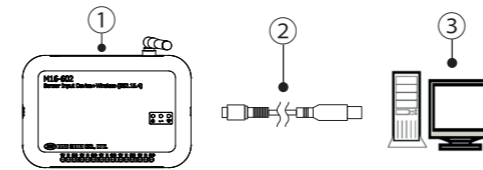

- M16-602 End-device
- Micro-B-to-A USB cable
- PC

Set-up and Configuration

The device must be configured before placing into operation for the first time. Once the device has been configured, there is no need to perform configuration again unless there is a need to change the initial setup. The Wireless Mieruzzo Basic Software is needed to perform this procedure. Please install the software before proceeding to the configuration.

The following parameters will be set in the device during configuration.

Channel:

Sets the RF channel used to communicate with the receiver. Any value from 11 to 26.

Network ID:

Sets the ID of the network. The end-device and coordinator device must have matching network ID in order for the devices to see each other. Any value from 1 to FFFFFFFF.

ID Name:

Sets the name of the device within the network. ID Name must be unique for each device to be connected on the same network. Maximum of 20 characters, cannot be started with space.

Important!

This device requires Wireless Mieruzzo Basic Software to perform the configuration. Please install the software and perform the configuration of the device. Please refer to the software instruction manual of the Mieruzzo USB device for the detailed instructions in performing the configuration. This device should be configured at first-time usage in order for the device to work properly. This device should be power cycled after configuration to reflect the parameter changes.

Conformance Warnings

Contains Model XBee S6BSM Radio, IC: 1846A-XBS2C
 Contains FCC ID: MCQ-XBS2C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference and
- This device must accept any interference received, including interference that may cause undesired operation.

To satisfy FCC RF Exposure requirements for mobile transmitting devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance are not recommended.

These wireless devices are compliant with radio law in Japan, the United States, Canada and EU. They cannot be used in countries and regions other than Japan, the United States, Canada and EU member countries.

The violation of laws and regulations against wireless devices may result in punishment in each country and region.

INSTALLATION/DEPLOYMENT GUIDELINES


It is important to consider the installation environment when deploying the wireless device. The device has to be tested at different possible locations to get the installation which gives the best signal. If it is possible, maintain line-of-sight between the wireless device and the Wireless Coordinator (M16-303). The following guidelines may also be followed if obstructions cannot be avoided.

- Do not put the device near metal objects or walls. Metal objects can highly interfere the 2.4GHz signal.
- Elevate the devices higher off the floors. At least 1m elevation is advised.
- Do not install the device near a grounded surface.
- For multiple devices installation, locate the router at the center of the installation area.
- Position the device's antenna vertically (the antenna is standing straight up).

Communication range may be reduced when obstructed. Wireless signal are reflected or absorbed when obstructed by some material, resulting to poor signal quality. It is best to put the devices on direct line-of-sight (LOS) of the coordinator, for better performance.


Obstruction Material	Wood	Glass	Plaster Wall	Concrete	Metal
Effect on Signal	Low	Low	Medium	High	Very High

LABELS

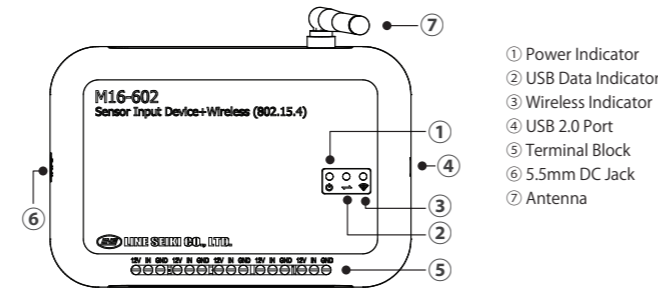

- Power Indicator
- USB Data Indicator
- Wireless Indicator
- USB 2.0 Port
- Terminal Block
- 5.5mm DC Jack
- Antenna

INDICATOR



During device initialization or after power ON, the Data and Wireless LED blinks *amber* light for 5~7 seconds.


DATA INDICATOR	TYPE OF EVENT - CONFIGURATION
OFF	Device not connected to PC
Amber Light Blinking	Device enumeration
Amber Light ON	Device enumeration successful
Green Light ON	Device connected to Wireless Mieruzzo Basic Software
Green Light Blinking	Saving configuration to the device
DATA INDICATOR	TYPE OF EVENT - WIRELESS MODE
OFF	No USB device connected; No device enumerated
Amber Light ON	Device enumeration
Green Light ON	Connected device is supported
Red Light Blinking	Connected device is not supported
WIRELESS INDICATOR	TYPE OF EVENT - COMMUNICATION MODE
Amber Light ON	Waiting for Wireless Mieruzzo Basic Software to establish connection
Green Light ON	Connected to Wireless Mieruzzo Basic Software
Green Light Blinking	Device is sending data to Wireless Mieruzzo Basic Software
Red Light ON	Device failed to send data to software; Connection failure

Important!

DK-5000 series does not need an external power supply when connected to this wireless device. Please connect the AC/DC Power Adapter to M16-602 instead. Connect the OTG cable to the wireless device and the Micro USB cable to the DK-5000 unit. Connect the USB Type A connector of the Micro USB cable to the OTG Type A receptacle. The USB cables must not be interchanged. Doing so will cause the device to malfunction. Using a USB cable longer than 2 meters might cause communication error. Only up to 2 meter USB cable is recommended.


WIRING DIAGRAM

Input Terminal Array



- All 12V terminals are connected internally.
- All ground (GND) terminals are connected internally.


Input Circuit: Non-voltage Input (NPN Input)

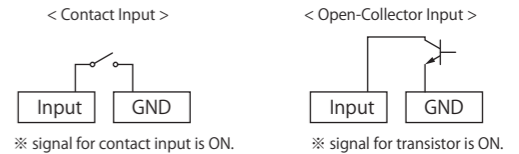

signal for contact input is ON.

signal for transistor is ON.

NPN Voltage Input

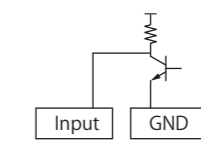

signal for transistor is ON.

Caution!

Maximum voltage that can be connected to the input terminals of the device is up to DC30V. Excessive voltage may damage the internal circuitry. There is also risk of electrical shock so please exercise caution.

SPECIFICATIONS

Model	M16-602
Input Mode	Contact / Open-Collector Input
Input	Non-contact Input: Open Collector (Sink Current approx. 1.5mA) L: <1.4V Contact Input: Relay, Microswitch, Others (Sink Current approx. 1.5mA)
Input Speed	Count Input: 10Hz (Duty 1:1) State Input: 1sec min. pulse width ¹
Sensor Power Supply	For External Sensor: DC12V (100mA)
Sensor Input Terminal	Terminal Screw
Power Source	AC/DC Power Adapter for DK-5000
DK-5000 Connection	USB 2.0 (USB Micro-B)
Wireless Communication	IEEE 802.15.4
Wireless Range	Up to 30m Line-of-Sight (LOS)
Operating Frequency	ISM 2.4 - 2.5 GHz, Direct Sequence Spread Spectrum (DSSS)
Operating Channel	11 to 26
Operating Humidity	35 ~ 85% RH (Non-condensing)
Operating Temperature	0 ~ 50°C (Non-freezing)
Storage Temperature	-10 ~ 60°C (Non-freezing)
Dimension	150(L) x 100(W) x 32(H) mm (excluding antenna)
Weight	Approx. 250g (excluding accessories)
Accessories	Instruction Manual x 1, USB On-the-Go (OTG) Host Cable x 1, Micro B-to-A USB Cable x 1, AC/DC Power Adapter x 1
Compliance	CE, RoHS, FCC, IC, ARIB

Note 1: Applicable for DK-5000 Type D application only.

For more details, please visit our website at <http://www.lineseiki.com>